V3 Watt&CCT Tunable FLOOD LED LIGHT

Installation

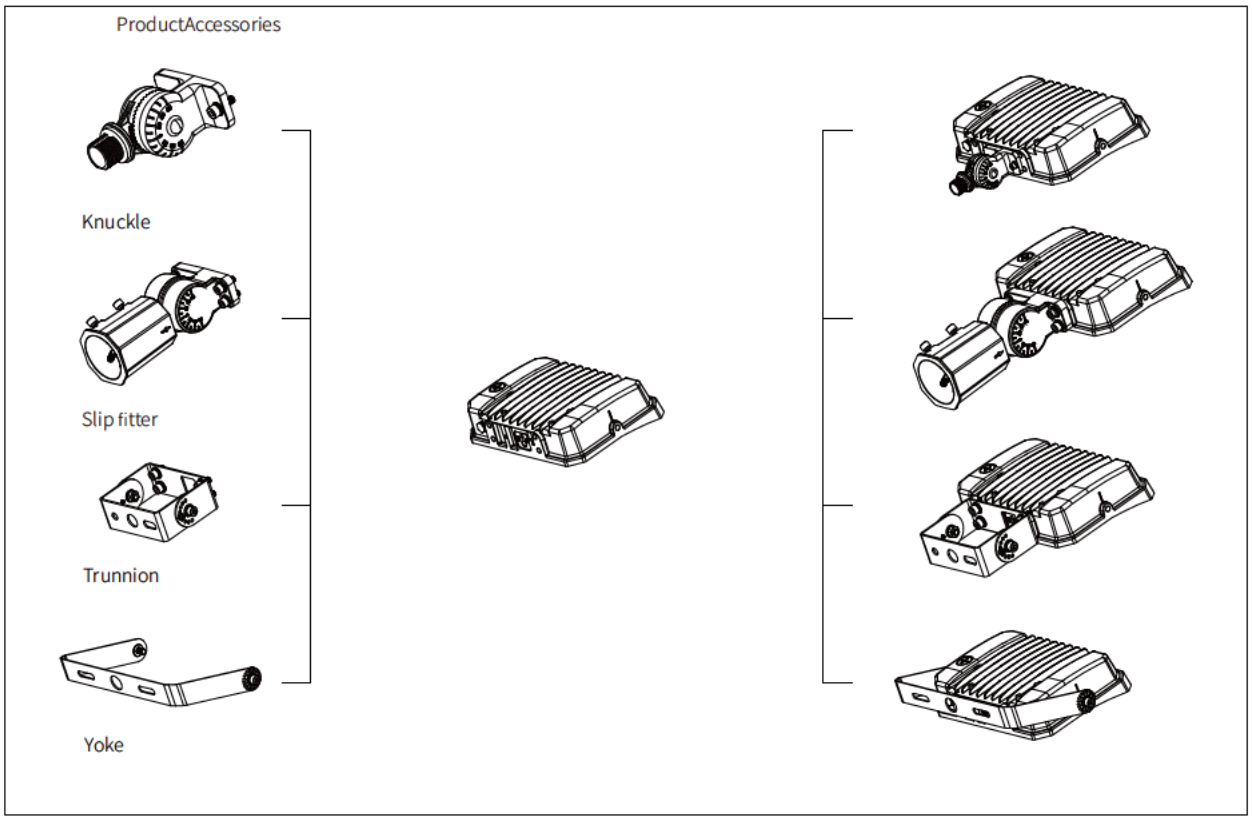

Installation Instruction (Slip fitter)

1.Loosen the screw used to fix the upperand the lower mount in rotating shaft byHexagon wrench.

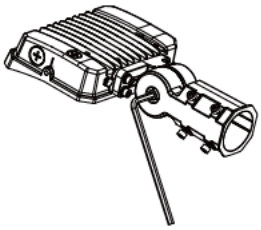

2.Rotate the bracket to proper Angle..

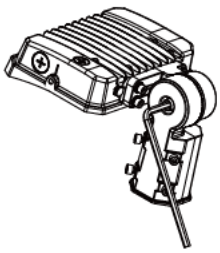

3.Lock the upper and lower brackets byHexagon wrench.

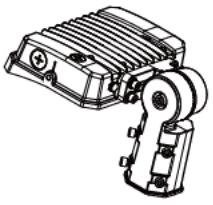

4.Connect wires.

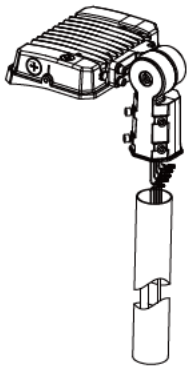

5.Fix the bracket to lamp pole byhexagonal wrench.

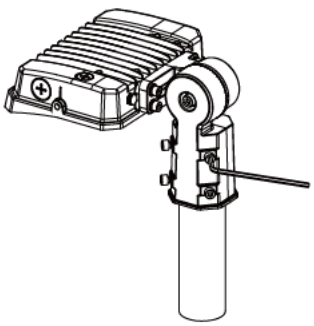

Notice: The maximum diameterof lamp pole is 2.36",lamp adjustable angle is 0 90°

energy harness
LED LIGHTING SOLUTIONS

V3 Watt&CCT Tunable FLOOD LED LIGHT

Installation Instruction

water proof gasket
cover of junction box
screw

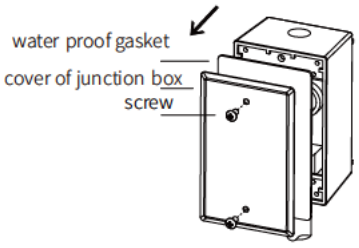

2.Put the wires of lamp into thejunction box.

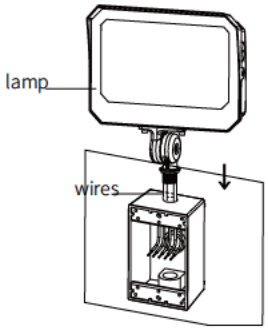

3.Screw up the knuckle mount intojunction box.

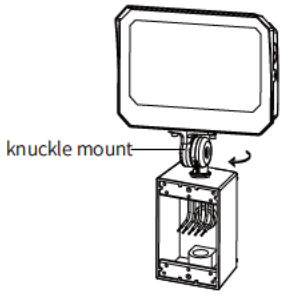

4.Use wire nuts to connect the wiresof lamp and junction box.

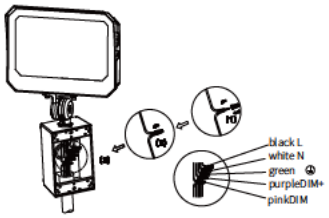

5. lock the junction box with screw key.

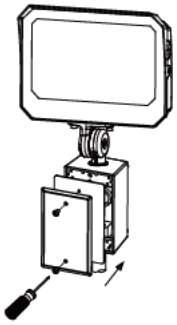

6.Use hex key to screw off the hex screwin knuckle mount.

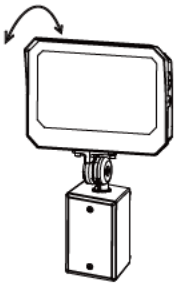

7.Adjust the lamp into suitable angle.

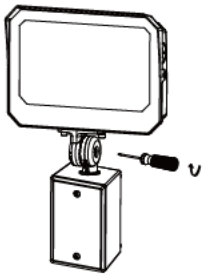

Installation Instruction(Yoke)

1.Mark the position of the fixing holes withfoold light bracket, then drill the fixing holes

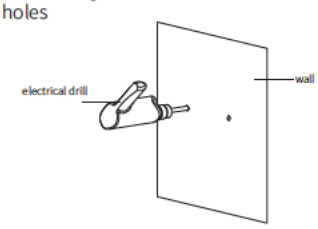

2.Drive in the bolts to the pre drilled holes withthread outside, as the below pic indicate.

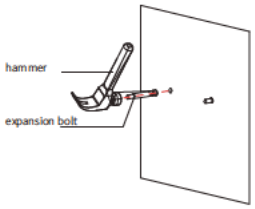

3.Make the bracket face tightly to the wallthrough the thead.

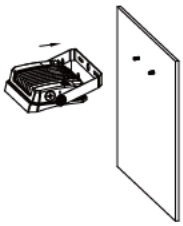

4.Fasten the srew nut clockwise withprovided hardware by wrench.

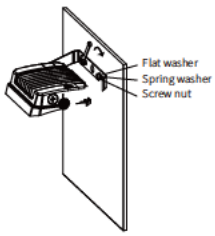

5.Rotate the light to the proper angle and fasten the srews.

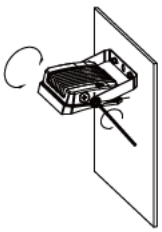

V3 Watt&CCT Tunable FLOOD LED LIGHT

6.Fasten the srew both sides with allen driver..

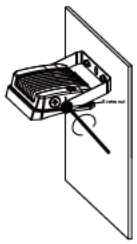

7.Connect wires.

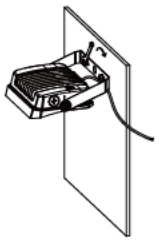

InstallationInstruction (Trunnion)

1.Mark the position of the fixing holes withfoold light bracket,then drill the fixing holes

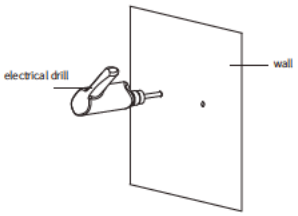

2.Drlve In the bolts to the pre drllled holes wlththread outside,as the below pic indicate.

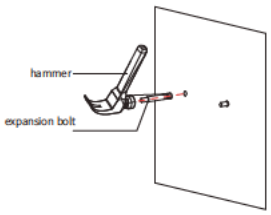

3.Make the bracket face tlghtly to the wallthrough the thead.

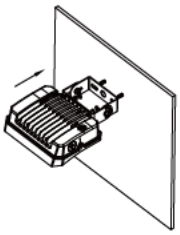

4.Fasten the srew nut clockwise withprovided hardware by wrench.

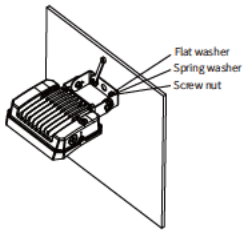

5.Rotate the light to the proper angle andfasten the srews.

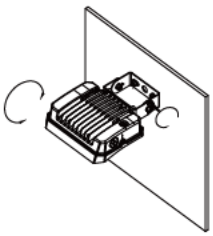

6.Fasten the srew both sides with allen driver.

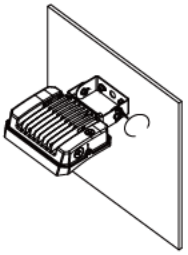
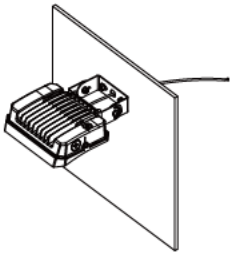
7.Connect wires.